



Chassis Technical Bulletin CTB 010, 15 July 2009

Title: Brake Chamber Push Rods

Component: Brake Chamber Push Rods

Condition: Any bends, bows, dents or damage.

Action Required: No straightening is allowed. Replacement of entire brake chamber.

NOTE: Prior to working or removal of any brake chamber the spring should be disarmed (see attached photos). For a detailed procedure on disarming a brake chamber please see IICL Technical Bulletin CTB 012



(Maxi brake safety chamber)



INSTITUTE OF INTERNATIONAL CONTAINER LESSORS



(Maxi brake safety chamber)

*1990 M STREET NW, SUITE 650, WASHINGTON, DC 20036-3417 USA
TELEPHONE: 202 223-9800 FAX: 202 223-9810 WEBSITE: www.iicl.org*



(Brake chamber locked inside safety chamber)



(Brake chamber locked inside safety chamber)



INSTITUTE OF INTERNATIONAL CONTAINER LESSORS



(Cut holes through brake chamber head housing and spring)

*1990 M STREET NW, SUITE 650, WASHINGTON, DC 20036-3417 USA
TELEPHONE: 202 223-9800 FAX: 202 223-9810 WEBSITE: www.iiicl.org*